

## Microphone In



Lockable 3.5mm Connector

## Headphone Out\*



\*US-Version: Deactivated during Recording

## Level LED

- Audio Level
- Limiter Triggered
- Clipping
- ☀ Battery Low
- ☠ Card Missing/Error

## Status LED

- Standby
- Record
- Playback
- ☀ App Connected

## microSD Card

Open & Push Card to Eject

## User Switch

- ↑ **Recording**  
Start ▶ Stop
- ↓ **Power**  
On ▶ Off

## Charging LED

- ☀ Charging
- Full

## USB-C Charging

& Can be used as Card Reader  
when TRACK E is Switched Off

